




PLEASE START HERE

The first step in installing your new fork brace/stabilizer is to slide the rubber dust boots up your fork tubes as shown in the picture below. The fork brace is designed to clamp around the lower fork stanchion in the area where the rubber dust boot used to be. The fork brace NEVER clamps around the outside of the rubber dust boot. Please note in the picture below that one section of the fork brace has been placed on the fork stanchion so you can see how it fits.

After you have completed the installation instructions on the reverse side of this page you will slide the dust boots back down the fork tube. You will note the top of your fork brace is designed with a lip that the dust boots fit over.



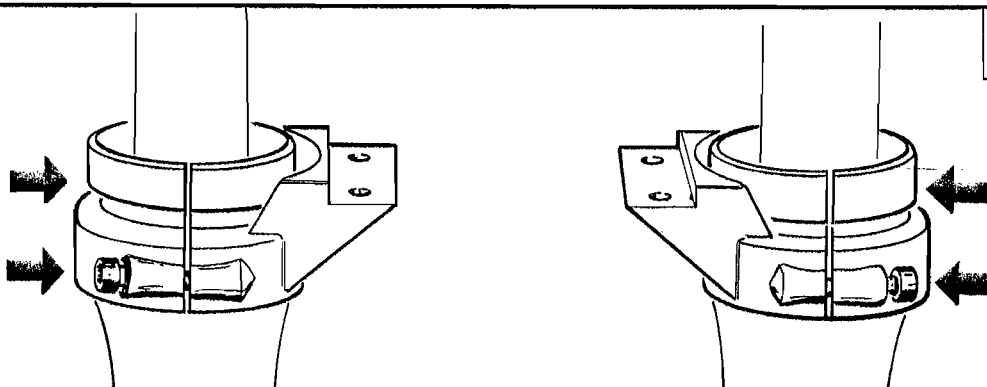


1 Impuntare le 4 viti laterali senza stringere.

Insert the 4 side screws without tightening.

Die 4 seitlichen Schrauben stemmen, ohne sie anzuziehen.

Buter les 4 vis latérales sans serrer.

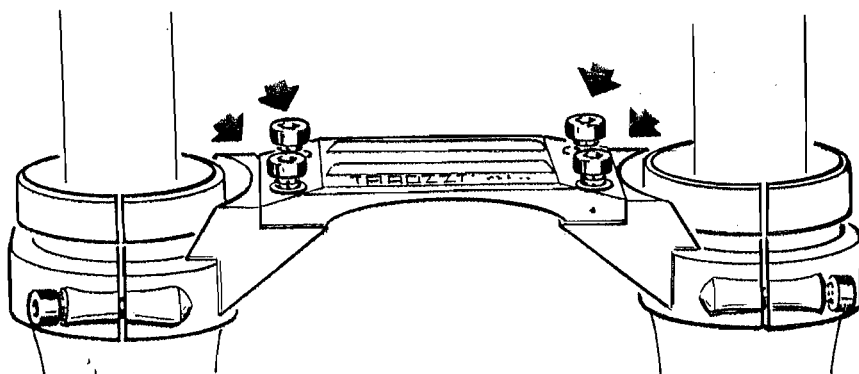


2 Impuntare le 4 viti superiori senza stringere.

Insert the 4 upper screws without tightening.

Die 4 oberen Schrauben stemmen, ohne sie anzuziehen.

Buter les 4 vis supérieures sans serrer.

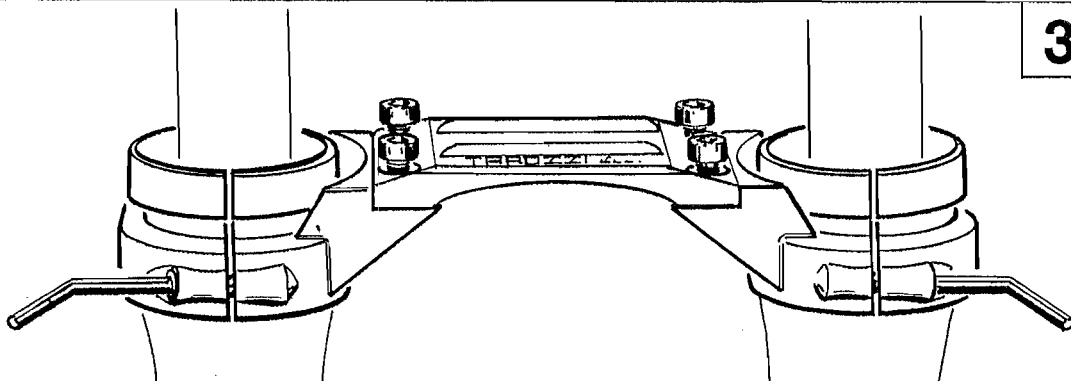


3 Bloccare le 4 viti laterali.

Tighten the 4 side screw.

Die 4 seitlichen Schrauben anziehen.

Serrer les 4 vis latérales.

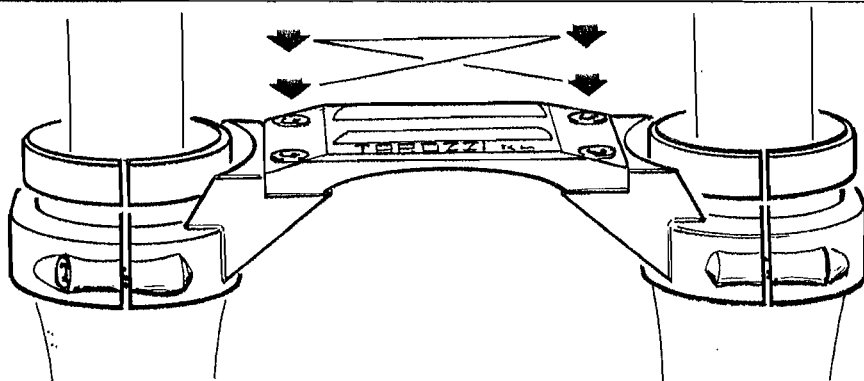

4 Bloccare le 4 viti superiori facendo bene attenzione ad incrociare l'operazione.

Tighten the 4 upper screws by taking care to carry out the tightening crosswise.

Die 4 oberen Schrauben anziehen, indem man sehr beachtet, sie kreuzweise zu spannen.

Serrer les 4 vis supérieures en prenant soin de croiser l'opération.